




INSTALLATION MANUAL

LED Wall Mount

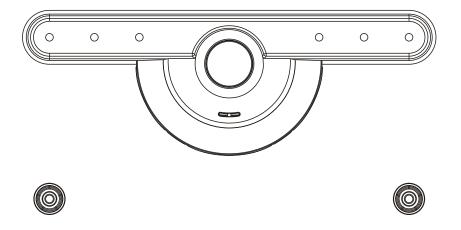



419 E 4th Street, Royal Oak, MI48067 Tel: 1888-205-8290

info@turbo-teck.com techsupport@turbo-teck.com www.turbo-teck.com



CAUTION: DO NOT EXCEED RATED LISTED WEIGHT. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

TTF01







ISSUED: May. 2013


NOTE: Read the entire instruction manual before you start installation and assembly.

MARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

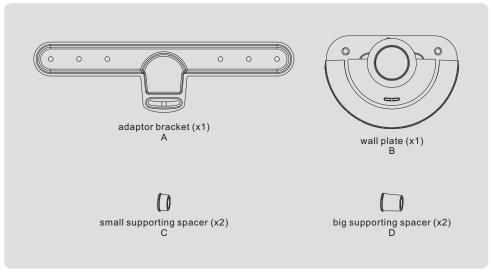

Package M

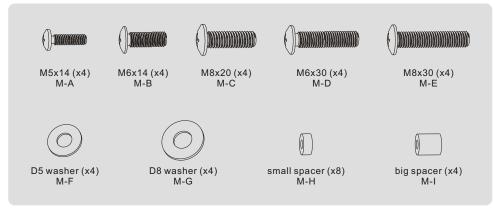

Package W




1♦♦♦

1. Removing the Decorative Cover




Remove the plastic cover by releasing these two clasps.




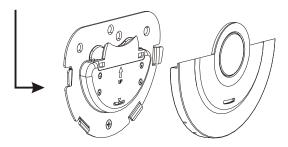


2a. For Wood Stud Wall Mounting



 

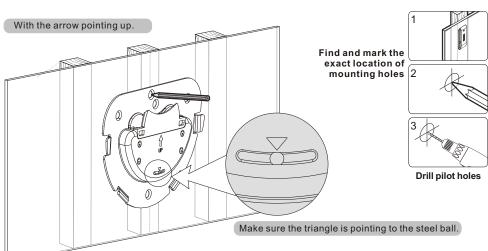

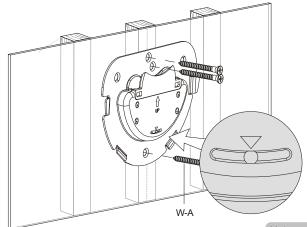




Screw the wall plate onto the wall

Make sure the triangle is pointing to the steel ball.

WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

2b. For Solid Brick and Concrete Mounting

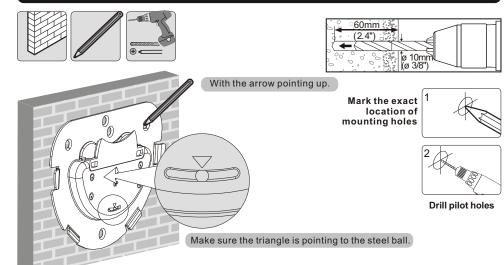


3 4444 **₩** 4

Make sure the triangle is pointing to the steel ball. Screw the wall plate onto the wall


⚠ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Installing the Decorative Cover

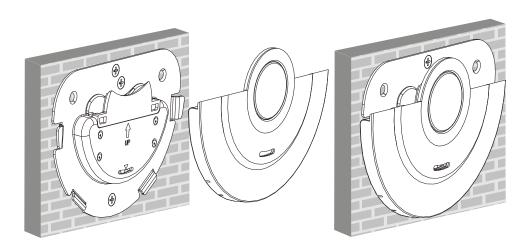

 4. Installing the Adapter Bracket and Spacers






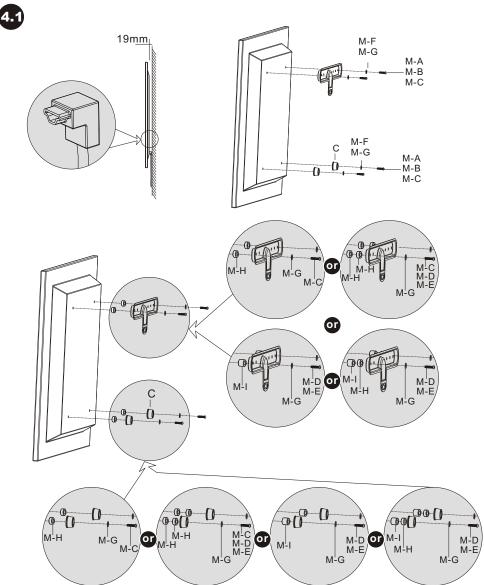


5+444

5. Hanging the TV onto the Wall Plate




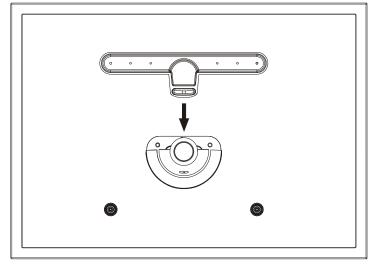




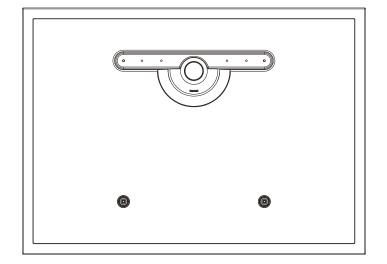

After the wall plate has been safely secured to the wall, carefully lift your TV and hook the top adapter bracket to the wall plate rail.

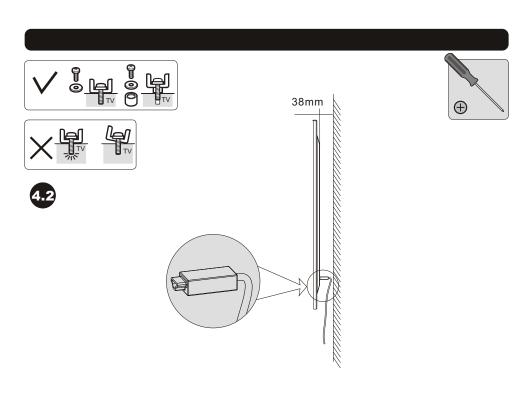

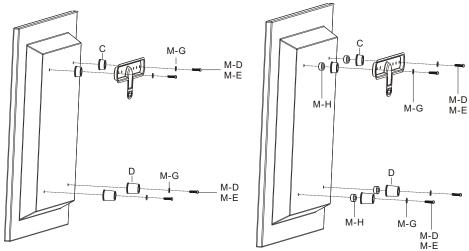


Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Position the adapter brackets as close as possible to the center of the TV.
 Screw the adapter brackets onto the TV.


Tighten all screws but do not over tighten.

7₩ ₩ 8


6. Removing the TV

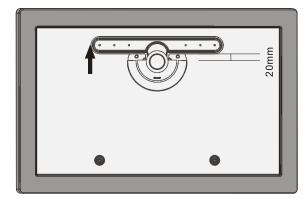

You have to lift up screen until the screen can't be lifted.

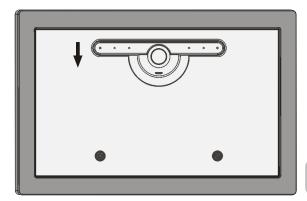

Put it down back slowly in order to unlock the bracket.

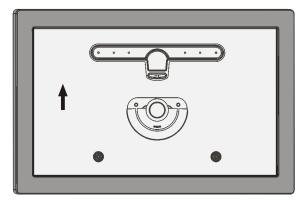

The second time when you lift up, you can remove it from wall plate.

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
 Please contact your distributor if you have any questions.

9 ፋ ₩ 10